


## Styli Replacing Notes

These illustrations show how to remove your old stylus and replace it with the new one


### Ceramic Cartridges

#### Single Tip (clip in/out type)

Ensure New stylus locates in centre of rubber rest

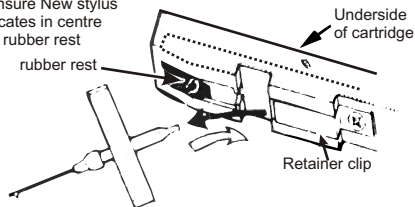


#### Single Tip (screw type)



- 1) Loosen screw with a small screwdriver
- 2) Remove front of stylus from rubber rest and slide forward

#### Turnover Type (double tip)

Ensure New stylus locates in centre of rubber rest

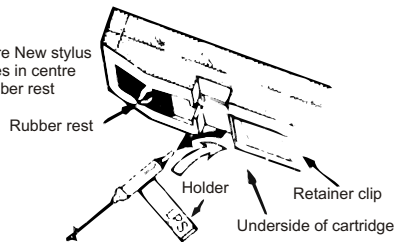

- 1) Swing plastic holder down vertically
- 2) release from rubber rest
- 3) using gentle pressure, pull down and forward


## Styli Replacing Notes

These illustrations show how to remove your old stylus and replace it with the new one


There are 4 basic types

### Magnetic Cartridges


(1)

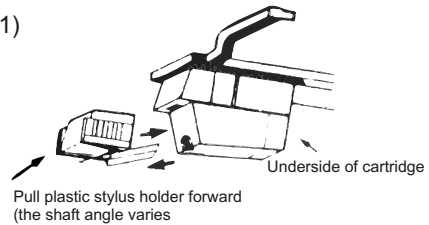

(2)

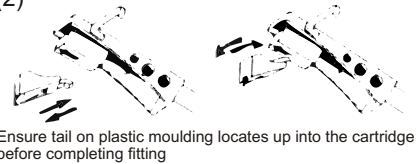

(3)

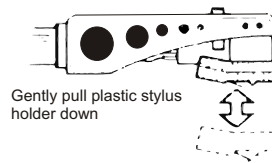

(4)

